

# VEI Systems Installation Instructions

## V1-VOM-Mx – P.O.L. Voltage Monitor


Please read these instructions completely before beginning installation to ensure that you have the tools and skills necessary for installation and operation of this instrument. If you are not sure that you can perform the installation safely, then consult a qualified installer. Further instructions available at [www.VEISystems.com/technical.html](http://www.VEISystems.com/technical.html).

### MOUNTING

Install the unit through the front of the mounting hole in the dash pod or panel. If you are making a custom dash panel, you will need to drill a 2-1/16" hole. Slide the clamp onto the 2 studs on the back of the instrument. Secure with the 2 thumb-nuts. Use a small drop of threadlocker or nail polish on the thumb-nuts to prevent them from loosening under vibration.

### WIRING

The wires should be connected as below using crimp-on butt-splice connectors, or soldered and sealed with heat-shrink tubing. Before connecting any wires, you should either disconnect the battery power, or carefully connect the wires in the order shown. If not, you may damage the instrument. Use an existing fuse in the fuse panel, or an external fuse to supply power to the instrument. The V1 series instruments use an 105mA of current avg. and 175mA max, so ensure the fuse is sized appropriately. For a typical 6- or 7-gauge setup, a single 5 Amp fuse is good.

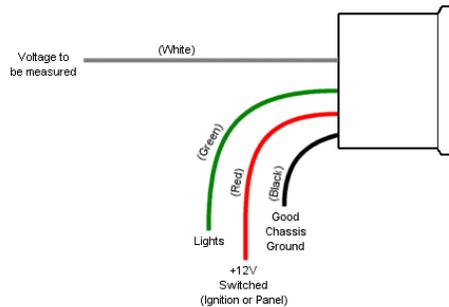

- BLACK -- connect to a solid chassis ground under the dashboard, or directly to the battery. You may need to expose the metal connection point under the dash by scraping or lightly sanding it. A ring terminal and a screw should work well in most cases.
- RED -- connect this to a source of **switched** +12V power. This will usually be found at or near the ignition switch, and will usually have a relay wired through the ignition switch. An alternate source of this is a switched power line from a nearby light or accessory (radio, etc). If you are unsure that the wire can supply the power required for the instrument, then use an external relay.
- GREEN -- connect this wire to the positive line (+12V) from the headlight switch. When this line receives a positive voltage, the gauge will use the "park-lights" brightness setting. Alternatively, if setting up a racing-mode display, this can be connected to a separate mode switch (12V or 0V signal).
- WHITE – this additional wire is, specific to the P.O.L. (Point-of-Load) voltmeter, is what provides the instrument with the voltage to be measured. By separating this wire from the voltage supply wire, there is practically no voltage drop along this wire that would otherwise be a significant instrument error. Connect this wire to the voltage point to be measured, such as the positive battery terminal, or an audio distribution block, etc. If you really don't want to take advantage of the P.O.L feature, you may connect this wire to the red wire.

### OPERATION

Press and hold the button for a few seconds to change the mode. Press and release quickly (tap the button) to change the setting in any mode. Modes are as follows:

MODE	DISPLAY	SETTINGS
Normal	(Voltage)	Tap to turn off audible alarm (if triggered).
Set low-voltage alarm	LO / 9.0	Sets the low-voltage alarm threshold from 9.0V to 12.0V in 0.1V steps.
Set high-voltage alarm	HI / 13.0	Sets the high-voltage alarm threshold from 13.0 V to 16.0V in 0.1V steps.
Brightness Regular	Br . 9	Last digit shows regular brightness level from 1 to 9.
Brightness park-lights on	BP . 1	Last digit shows brightness level with lights on from 1 to 9.

### WARRANTY & LIABILITY

Neither VEI Systems, nor its dealers or agents shall be liable in any way, for any damage, loss, injury or other claims, resulting from the installation or use of this product. By purchasing or installing this product, you assume all liability of any kind connected with the use and/or application of this product. If you are unsure that you can safely install and use this product, consult a qualified installer or mechanic. The warranty on this product covers only the product itself for a period of 1 year from the date of purchase, and it will be at our discretion to repair or replace the affected parts. No user serviceable parts inside. Warranty void if product enclosure opened.